



743-221-01

Operating Manual

All rights reserved.

Property of Dürkopp Adler AG and protected by copyright. Reproduction or publication of the content in any manner, even in extracts, without prior written permission of Dürkopp Adler AG, is prohibited.


Copyright © Dürkopp Adler AG - 2013

1	About this operating manual	3
1.1	Scope of application of the operating manual	3
1.2	For whom is this operating manual?	3
1.3	Conventions of representation – Symbols and characters	3
1.4	Other documents	4
1.5	Liability	4
1.5.1	Transportation	5
1.5.2	Intended use	5
2	Performance description	7
2.1	Features	7
2.2	Declaration of conformity	8
2.3	Optional equipment	8
2.4	Technical data	10
3	Safety instructions	11
3.1	Basic safety instructions	11
3.2	Signal words and symbols used in warnings	12
4	Machine description 743-221-01	15
4.1	Sewing unit 743-221-01	15
4.2	Software description	16
5	Operating the sewing unit	17
5.1	Switching on and off	17
5.2	Threading in the needle thread	18
5.3	Adjusting the needle-thread tension	19
5.4	Needle thread monitor	20
5.5	Setting the thread regulator	21
5.6	Winding on the hook thread	22
5.7	Changing the bobbin	24
5.7.1	Counter for the hook thread reserve	25
5.8	Residual thread monitor	25
5.9	Setting the hook thread tension	27
5.10	Changing the needle	28
5.11	Changing the template set	29
5.12	Working range, angle and length	30
5.13	Setting the insertion depth of the folding table	32
5.14	Setting the control unit	34
5.14.1	Functions in the main menu	34
5.14.2	Functions in the submenu	36
5.14.3	Error messages	39
5.15	Sewing	40
5.16	Maintenance of the sewing unit	42
5.16.1	Swinging up the machine head	42
5.16.2	Cleaning	43
5.16.3	Oil lubrication	44
6	Installation	47
6.1	Delivery scope	47
6.2	Installing the sewing unit	48
6.2.1	Transportation	48

6.2.2	Removing the transport securing devices.....	49
6.2.3	Setting the working height	49
6.3	Attaching the machine parts removed for shipping.....	50
6.3.1	Thread reel holder	50
6.3.2	Holding device for the template set	51
6.3.3	Attaching the operating panel OP 3000.....	51
6.4	Electrical connection.....	52
6.5	Pneumatic connection	53
6.5.1	Oil lubrication	54
6.6	Putting into operation.....	56
6.7	Installation of the software	57
6.7.1	General information	57
6.7.2	Loading the program.....	58
6.7.3	Dongle-Update via Internet.....	59
6.8	Customer service.....	59

1 About this operating manual

The operating manual for the 743-221-01 sewing unit was compiled with the utmost care. It contains information and notes in order to make long-term and reliable operation possible.

Should you notice any discrepancies or if you have improvement requests, then we would be glad to receive your feedback,  *chapter 5.8*.



Please regard the operating manual as part of the product and keep it in a safe place where it can be easily accessed. Read the operating manual completely prior to using the unit for the first time. Only pass the product on to third parties together with this operating manual.


1.1 Scope of application of the operating manual

This operating manual describes the set-up and intended use of the 743-221-01 sewing unit.

1.2 For whom is this operating manual?


The operating manual is intended for:


- Machine operators:
This group of employees has been trained in operating the machine and can access the operating manual. Specifically  *Chapter 5 of the Operating Instructions* is important for this group of employees.
- Technicians:
This group of employees has the appropriate technical training allowing them to perform maintenance on the sewing unit or to repair faults. Specifically  *Chapter 6 of the Set-up Instructions* is important for this specialized staff. Service instructions are supplied separately.

With regard to minimum qualification and other requirements to be met by the personnel, please also observe  *chapter 3 Safety Instructions*.

1.3 Conventions of representation – Symbols and characters

For an easy and quick understanding different information are depicted or highlighted in this operating manual by the following characters:

Symbol/character	Meaning
•	Lists are identified by bullet points.
1. 2.	Instructions are numbered and have to be performed in the specified order.
	References to further information in this operating manual or other documents are identified by this symbol.

Safety Important warnings for the user of the machine are specifically marked. Because safety constitutes an area of major importance, hazard symbols, levels of risk, and their signal words are described separately in  *chapter 3 Safety Instructions*.

Location information Information on where something is positioned using the terms "right" or "left" must always be regarded from the operator's point of view if the figure gives no other obvious indication for determining the location.

1.4 Other documents

The device contains built-in components from other manufacturers. The respective manufacturers have carried out hazard assessments for these purchased parts and confirmed compliance of the design with the applicable European and national regulations. The intended use of the built-in components is described in the corresponding manuals of the manufacturers.

1.5 Liability

All information and notes in this operating manual have been compiled in accordance with the latest technology and the applicable standards and regulations.

The manufacturer cannot be held liable for any damage due to:

- Damage during transport
- Failure to observe the operating manual
- Improper use
- Unauthorized modifications to the machine
- The deployment of untrained personnel
- Using spare parts not approved

1.5.1 Transportation

Dürkopp Adler cannot be held liable for any damage during transport. Check the delivered product immediately after receiving it. Report any damage to the last transport manager. This also applies if the packaging is not damaged.

Keep the machines, devices and packaging material in the condition they were at the time when the damage was identified. That secures any claims towards the transport company.

Report all other complaints to Dürkopp Adler immediately after receiving the product.

1.5.2 Intended use

The Beisler 743-221-01 is for sewing light to moderately heavy material. The machine is only intended for processing dry material. The material must not contain any hard objects.

The seam is generally sewn with sewing yarns made from textile fibers of these dimensions: up to 40/NeB (cotton thread), 65/2 Nm (synthetic threads) or 65/2 Nm (core threads). If other kinds of threads are to be used, the possible dangers arising from them have to be assessed and, if necessary, safety measures have to be taken.

The sewing machine is intended for industrial use.

The machine may only be set up and operated in dry conditions on well-maintained premises. If the machine is operated on premises that are not dry and well-maintained, then further measures may be required which must be compatible with EN 60204-31:1999.

Only authorized/trained persons may work on the machine.

The manufacturer will not be held liable for damage resulting from improper use.

WARNING



Danger due to high voltage, crushing and sharp objects.

Improper use can result in injuries.

Please follow all instructions in the manual.

ATTENTION

Improper use could result in material damage.

Please follow all instructions in the manual.

2 Performance description

The Beisler 743-221-01 is a sewing unit for the sewing of single pointed darts and pleats of straight or curved shape in trousers, skirts and the like. The sewing unit is equipped with a double lockstitch sewing machine class 935-271-710 with large horizontal hook, needle thread monitor and residual thread monitor for the hook thread.

2.1 Features

- Sewing length controlled alternatively by light barrier or by programming
- Seam protection alternatively at seam beginning and seam end through stitch condensing or bartacking the material and thread chain
- Thread trimming system: Controlled chain trimmer
- High sewing performance and short cycle duration due to DAC classic in combination with a stepping motor and an additional control unit for the material feed
- Fully overlapping working method
- Compact, height adjustable sewing unit with transport coasters, to be operated in standing or sitting position
- Positioning station, folder station and sewing station are combined in a single swivel-mounted unit for easy maintenance and setting access
- Electronic thread monitoring system
- Designed to process spun and monofilament threads
- Integrated setting disc with positioning marks on the hand-wheel for a rapid and precise control of the machine settings
- A template set adapted to the sewing shape retains and guides the workpiece
- The template can be easily exchanged; upon ordering the sewing unit, one or several template sets have to be selected.
- The dart depth depends on its length, the template set and the setting of the folding table; by adjusting the folding table between 0 and 10°, the dart depth can be altered

2.2 Declaration of conformity

The machine complies with the European regulations specified in the declaration of conformity or in the installation declaration.



2.3 Optional equipment

By means of a flexible system of optional equipment the sewing unit can be equipped optimally and economically corresponding to the respective application.

- = Basic equipment
- ◆ = required equipment, alternatively
- = Optional equipment

Order No.	Basic equipment	Subclass 743-221-01
1970 991221	Sewing unit 743-221-01	●
0791 743506	Accessories	●
Required equipment, to be selected one template set and one folding table is required		
0793 078001 or 0793 078002 or 0793 078034 or 079 078091	Template set, straight dart or Template set, curved dart or Template set, pleats or Template set, dart or pleats customized, special design	◆
0792 038504 or 0792 038506 or 0783 080000	Folding table for darts or Folding table for pleats or Vacuum table for darts	◆
Racks		
0794 013631	Working method workpiece take-up from the front bundle clamp, positioning table and smoother	○

0794 013731	Working method workpiece take-up from the left bundle clamp, positioning table and smoother	○
0794 013333	Blower pipe from the top and the right	○
0794 013444	Positioning table when using in-house bundle clamp carriage	○
0797 003031	Pneumatic connection kit	○

2.4 Technical data

Technical data	743-221-01
Sewing stitch type	301/double lockstitch
Number of needles	1
Needle system	134 serv 7
Needle size [Nm]	90
Max. number of stitches (programmable) [min ⁻¹]	4800
Stitch length (programmable) [mm]	0.5-3
Stitch condensing (programmable) [mm]	0.5-2.0
Number of stitches [n] (programmable)	1-10
Number of bartack stitches [n] (programmable)	0-5
Max. stitch length [mm]	150
Max. seam offset [mm]	+/- 13
Operating pressure [bar]	6
Air consumption per working cycle (7 sec.) ca. [NL] with blower stimulus	2 12
Table height (infinitely variable) [mm] - min - max	850 1250
Length, width, height [mm]	2300, 1200, 1350
Weight [kg]	about 130
Nominal voltage [V]	1 x 190-240
Frequency [Hz]	50/60

3 Safety instructions

This section contains basic instructions for your safety. Read the instructions carefully before setting up or operating the machine. Make sure to follow the information included in the safety instructions. Failure to do this can result in serious injury and in damage to the machine.



3.1 Basic safety instructions

The machine may only be used as described in this operating manual.

The operating manual must be available at the machine's location at all times.

Work on live components and equipment is prohibited. Exceptions are defined in the specifications in DIN VDE 0105.

For the following work, the machine must be disconnected from the power supply using the main switch or by disconnecting the power plug:

- Replacing the needle or other sewing tools
- Leaving the workplace
- Performing maintenance work and repairs

Missing or faulty spare parts could impair safety and damage the machine. Therefore only use original spare parts from the manufacturer.

Transportation When the machine is being transported, use a lifting carriage or a forklift. Raise the machine max. 20 mm and secure it against slipping off.

Set-up The connecting cable must have a power plug approved in the specific country. The power plug may only be connected to the power cable by a qualified specialist.

Operator's obligations Observe the country specific safety and accident prevention regulations and the legal regulations concerning industrial safety and the protection of the environment.

All warnings and safety signs on the machine must always be in legible condition and may not be removed. Missing or damaged labels must be replaced immediately.

Requirements to be met by the personnel The machine may only be set up by qualified specialists.
Maintenance work and repairs may only be carried out by qualified specialists.

Work on electrical equipment may only be carried out by qualified specialists.

Only authorized persons may work on the machine. Every person who works on the machine must have read the operating manual first.

Operation Inspect the machine while in use for any externally visible damage. Interrupt your work if you notice that the machine has been altered. Report any alterations to your supervisor. A damaged machine must not be operated any more.

Safety equipment Safety equipment must not be removed or put out of service. If this cannot be avoided for a repair operation, the safety equipment has to be refitted and put back into service immediately afterwards.





3.2 Signal words and symbols used in warnings

Warnings in the text are distinguished by color bars. The color scheme reflects the severity of the danger. Signal words specify the severity of a danger:

Signal words Signal words and the endangerment that they describe:

Signal word	Endangerment
DANGER	Resulting in death or serious injury.
WARNING	Death or serious injury possible.
CAUTION	Minor to moderate injuries possible.
ATTENTION	Material damage possible.

Symbols In the case of dangers to personnel, the following symbols indicate the type of hazard:

Symbol	Type of danger
	General danger
	Danger due to electric shock
	Danger due to sharp objects
	Danger due to crushing

Examples Examples of the layout of the warnings in the text:

DANGER



Type and source of the danger

Consequences in the event of noncompliance

Measures for avoiding the danger

This is what a warning looks like for a hazard that will result in serious injury or even death if not com-

WARNING



Type and source of the danger

Consequences in the event of noncompliance

Measures for avoiding the danger

This is what a warning looks like for a hazard that could result in serious injury or even death if not complied with.

CAUTION



Type and source of the danger

Consequences in the event of noncompliance

Measures for avoiding the danger

This is what a warning looks like for a hazard that could result in moderate or minor injury if the warning is not complied with.

CAUTION



Type and source of the danger

Measures for avoiding the danger

This is what a warning looks like for a hazard that could result in environmental damage if not complied with.

ATTENTION

Type and source of the danger

Measures for avoiding the danger

This is what a warning looks like for a hazard that could result in material damage if not complied with.

4 Machine description 743-221-01

The Beisler 743-221-01 is a sewing unit for the sewing of single pointed darts and pleats of straight or curved shape in trousers, skirts and the like. The correct operating principle involves a sequence of different steps and requires precise knowledge of all operating controls.

4.1 Sewing unit 743-221-01

The illustration below shows the sewing unit 743-221-01.


Fig. 1: General overview of the 743-221-01



4.2 Software description

At this point only a short overview of the operating panel with its keys and corresponding functions is given.

Fig. 2: Operating Panel OP 3000

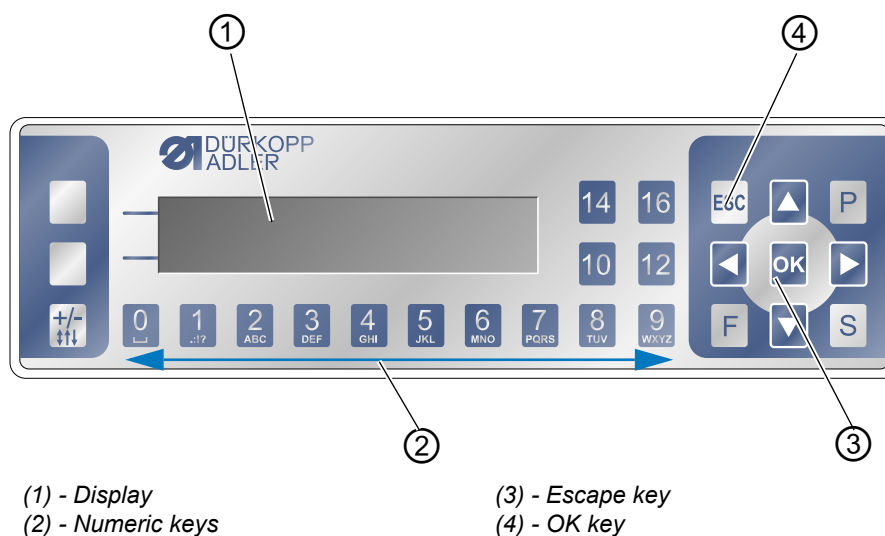

The settings of the control unit are effectuated via the operating panel OP3000. Here is a summary of some important possibilities for navigation:

Key/key group	Function
1 to 6	Switching on and off the functions shown in the display above.
Arrow keys (◀, ▶)	Navigating in the main menu
Arrow keys (▲, ▼)	Increasing or decreasing values/parameters
OK	Short keystroke confirms a selection Long keystroke resets f.e. the piece counter or the bobbin thread counter
ESC	No function in the main menu, but relevant in the sub-menu

5 Operating the sewing unit

The Beisler 743-221-01 is a sewing unit for the sewing of single pointed darts and pleats of straight or curved shape in trousers, skirts and the like. The correct operating principle involves a sequence of different steps and requires precise knowledge of all operating controls.

5.1 Switching on and off

ATTENTION!



Caution: Danger of injury!

Do not reach into the area of moving machine parts.

Fig. 3: Switching the machine on and off



(1) - Main switch

- Switching on**
1. Turn on the main switch (1).
 - ↳ The control is initialized.
 - ↳ The message "Reference" is displayed:
The sewing unit calls for a reference run.
 2. Press the "OK" key on the control panel.
 - ↳ The reference run is carried out.
The machine is ready for operation.
- Switching off**
- Turn off the main switch (1).
- ↳ The sewing unit is cut off the power supply.
It is **no longer** ready for operation.

5.2 Threading in the needle thread

ATTENTION!




Caution: Danger of injury!

Turn off the main switch.

Thread the needle thread only with the sewing unit switched off.


Fig. 4: Threading in the needle thread

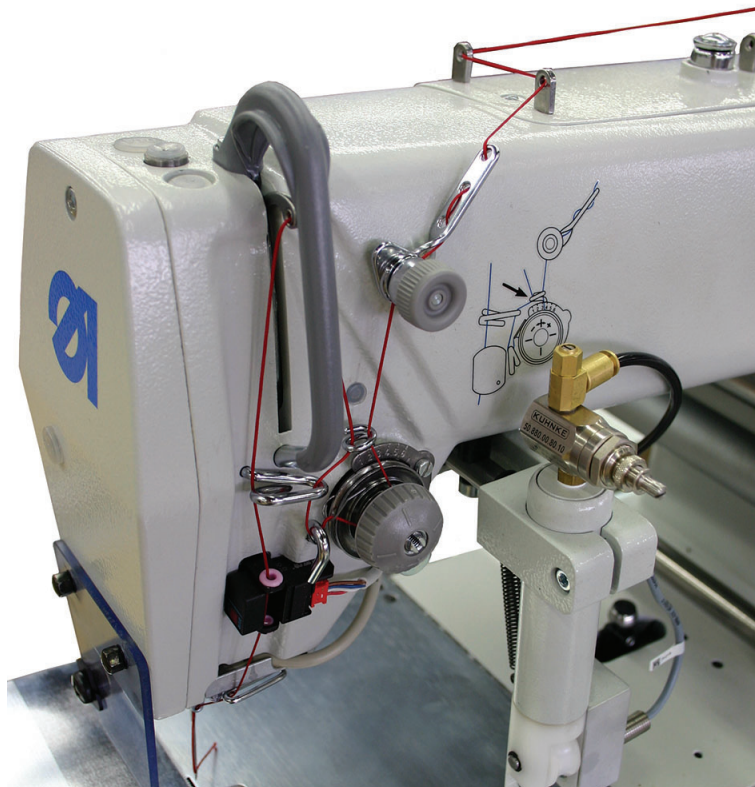

Thread the needle thread as shown in the picture above.

5.3 Adjusting the needle-thread tension

Fig. 5: Adjusting the needle thread tension

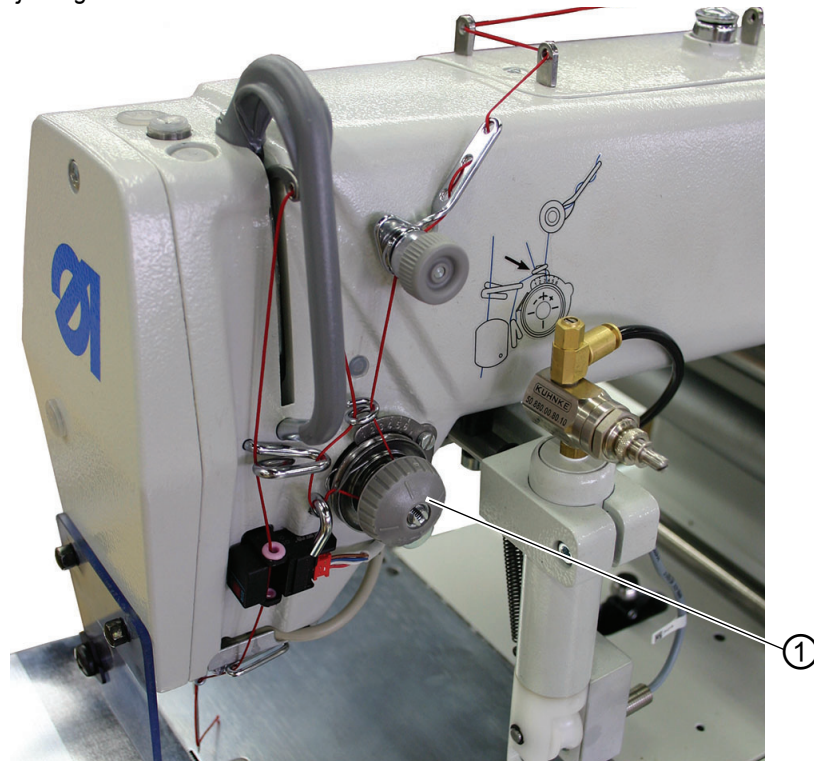

(1) - Main tensioner

Main tension

The main tensioner (1) should generate the adequate needle thread tension for the particular material and needle thread

- Turn the knurled nut accordingly.

Turn the knurled nut in clockwise direction = Increase the tension

Turn the knurled nut in counter-clockwise direction = Decrease the tension

5.4 Needle thread monitor


ATTENTION!



Caution: Danger of injury!


Turn off the main switch before threading in the needle. A restart is only possible after switching the main switch off and on again.

Fig. 6: Needle thread monitor

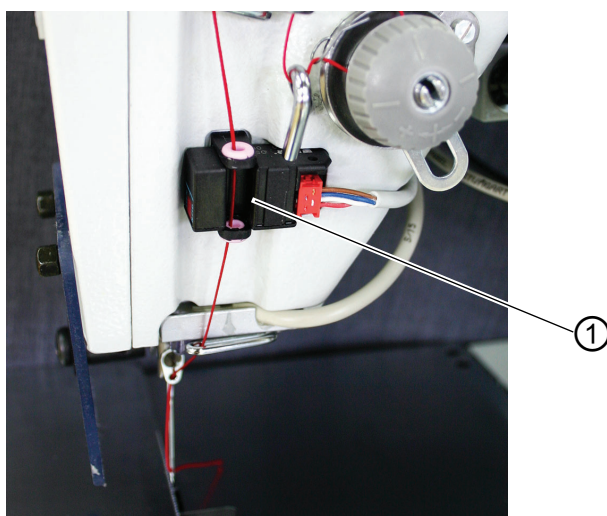

(1) - Thread monitor

At needle thread rupture, a rupture message will appear on the display and the machine stops.

1. Turn the machine off the main switch.
2. Remove the unfinished workpiece.
3. Thread in the thread again,  5.2 *Threading in the needle thread*, p. 18.
4. Turn on the machine at the main switch.
5. Start a new sewing cycle.

5.5 Setting the thread regulator

ATTENTION!



Caution: Danger of injury!

Turn off the main switch.

Adjust the thread regulator only with the sewing unit switched off.

The thread regulator (2) controls the quantity of thread required for the stitch formation.


The thread regulator has to be precisely adjusted for an optimum sewing result.

The setting of the thread regulator depends on the following factors:

- Stitch length
- Thickness of the material
- Characteristics of the yarn utilized

With correct setting the needle-thread loop (6) should slide without any overrun and with low tension over the thickest point of the hook.

Fig. 7: Setting the thread regulator

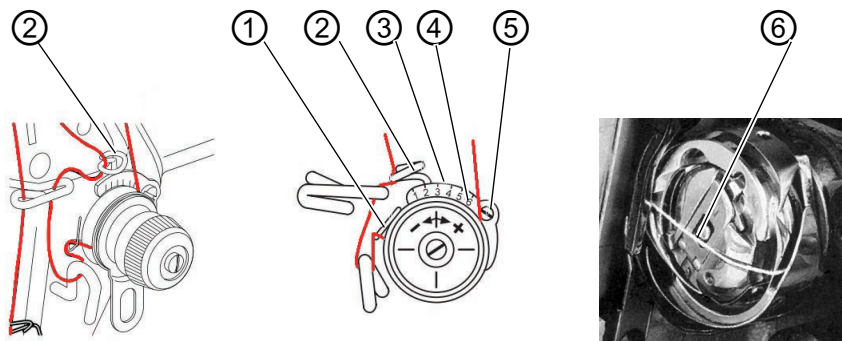

- (1) - Thread take-up spring
 (2) - Thread regulator
 (3) - Wire

- (4) - Scale
 (5) - Screw
 (6) - Needle thread loop

How to adjust the thread regulator:

1. Loosen screw (5).
2. Set the thread regulator (2).
 The vertical wire (3) serves in conjunction with the scale (4) as adjusting aid (guide value: 2.5).
3. Tighten screw (5).

Adjustment instruction:

The thread regulator's (2) is correctly adjusted if:

The thread take-up spring (1) is pulled down about 1 mm from its upper final position, when the thread loop (6) passes the maximum hook breadth.

The length of 1 mm is an approximative guide value. Depending on the tension of the thread take-up spring it may be higher or lower.

5.6 Winding on the hook thread

ATTENTION!




Caution: Danger of injury!

Turn off the main switch.

Thread the hook thread for winding only with the sewing unit switched off.

Fig. 8: Winding on the hook thread

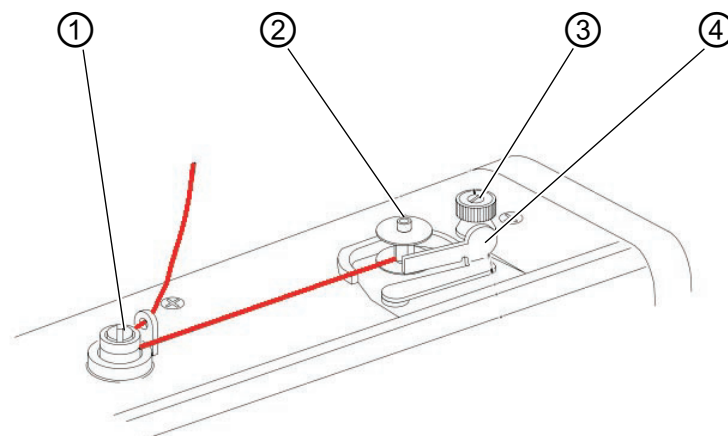


(1) - Bobbin thread tension
(2) - Winder shaft

(3) - Trimming clamp
(4) - Winder clip

1. For a trouble-free functioning of the residual thread monitor always remove any thread waste from the bobbin hub before winding.
2. Thread the hook thread according to the picture.
3. Prewind the hook thread in clockwise direction into the reserve groove of the bobbin hub.
4. Fit the bobbin on the winder shaft (2).
5. Pull the thread end through the trimming clamp (3) and cut it off.

6. Swivel the winder clip (4) against the bobbin.
7. Set the bobbin thread tension (1).
Wind on the hook thread with minimum tension.
8. Turn the main switch on.
9. Start the sewing process.

After reaching the set bobbin filling level the winder stops automatically.

For the setting of the bobbin filling level, see  *Service Instructions*.

5.7 Changing the bobbin

ATTENTION!



Caution: Danger of injury!

Turn off the main switch.


Change the hook thread bobbin only with the machine switched off.

ATTENTION!


Material damage

For a trouble-free functioning of the residual thread monitor, clean the lenses of the reflecting light barrier (2) after each bobbin change with a soft cloth.

Fig. 9: Changing the bobbin

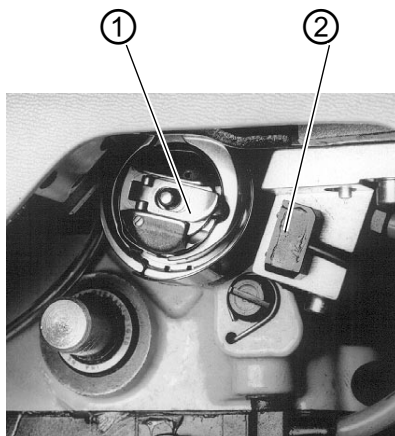

- (1) - Bobbin case flap
- (2) - Light barrier
- (3) - Bobbin
- (4) - Tension spring

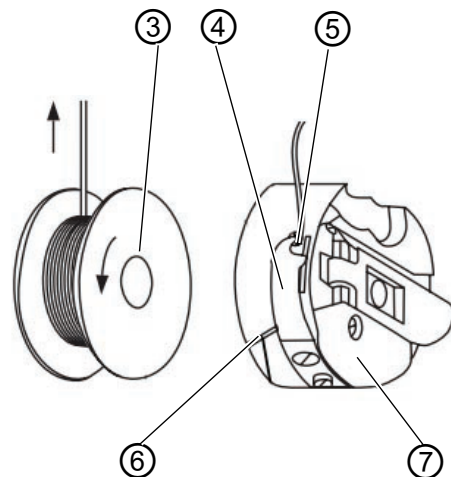


- (5) - Drill-hole
- (6) - Slot
- (7) - Upper bobbin case

Remove the empty bobbin.

1. Lift the bobbin case flap (1).
2. Remove the upper bobbin case (7) with the bobbin (3).
3. Remove the empty bobbin (3) from the upper bobbin case (7).
4. Insert a full bobbin (3) into the upper bobbin case (7).
5. Pull the hook thread through the slit (6) underneath the tension spring (4) into the drill-hole (5).
6. Pull about 5 cm of hook thread out of the upper bobbin case (7). When pulling the thread, the bobbin (3) should turn into the direction indicated by the arrow.


7. Insert the upper bobbin case (7) back into the hook, make sure the bobbin case flap (1) snaps into place.
8. Turn on the main switch.
9. Start a new sewing cycle.

5.7.1 Counter for the hook thread reserve

The remaining number of hook thread stitches is indicated on the display, see  5.14 *Setting the control unit*, p. 34.

Resetting


1. Select the symbol hook thread counter with the arrow keys.
 2. Effectuate a long stroke on the “OK” key.
- ↩ The counter is reset to its initial values.

How to set the initial value indicated by the hook thread counter is described in the  *Service Instructions*.


5.8 Residual thread monitor:

The residual thread monitor controls the thread reserve on the hook thread bobbin via reflecting infrared light barrier (1).

Fig. 10: Function Residual thread monitor

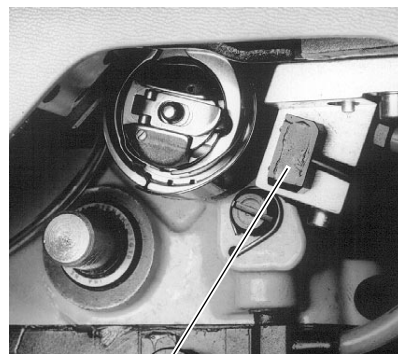

- (1) - Light barrier
(2) - Reflecting surface

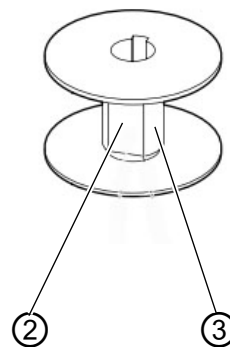

- (3) - Bobbin hub

Function

After a certain number of seams the hook thread quantity on the bobbin is used up.

The light beam transmitted by the light barrier (1) is reflected by the exposed reflecting surface (2) of the bobbin hub (3).

The display of the control unit shows a corresponding message.

The seam is safely finished with the thread remaining in the reserve groove.

ATTENTION!



Caution: Danger of injury!

Turn off the main switch.

Change the hook thread bobbin only with the machine switched off.

Changing the bobbin

1. Turn off the main switch.
2. Change the bobbin

Clean the lenses of the light barrier with a soft cloth after every bobbin change.

3. Turn the main switch on.
4. Start a new sewing cycle.

5.9 Setting the hook thread tension

The necessary hook thread tension is generated by the tension spring (1).

ATTENTION!




Caution: Danger of injury!


Turn off the main switch.

Adjust the tension spring (1) only with the sewing unit switched off.

Fig. 11: Setting the hook thread tension

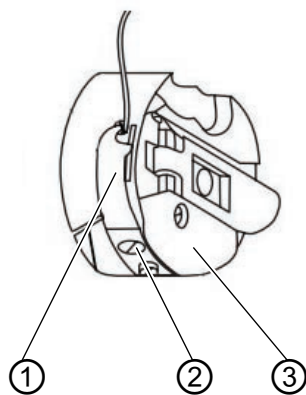

(1) - Tension spring
(2) - Adjusting screw

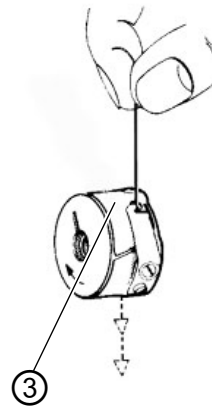

(3) - Upper bobbin case

1. Insert a full bobbin in the upper bobbin case (3).
2. Thread in the hook thread.
3. Set the tension spring (1) at the adjustment screw (2).
Guide value: The hook thread tension should be about 20-30 g.
The bobbin case should slowly sink down through its own weight.

5.10 Changing the needle

ATTENTION!




Caution: Danger of injury!

Turn off the main switch.

The needle may only be changed with the sewing machine switched off.

Fig. 12: Changing the needle

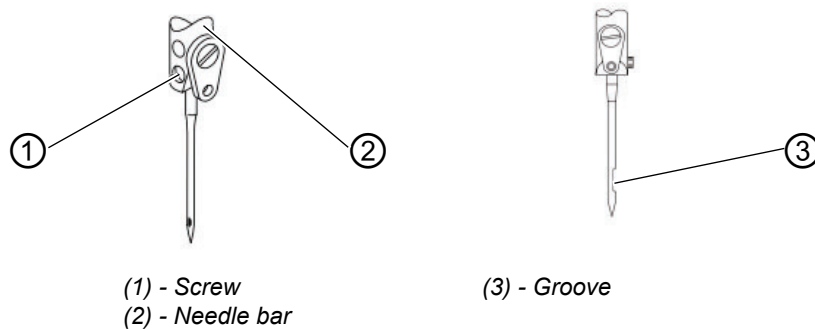

1. Loosen screw (1) and remove the needle.
2. Push the new needle into the drill-hole of the needle holder (2) as far as it will go.

Attention! Seen from the machine operator's side the needle scarf (3) should point to the right, i. e. to the hook tip (see sketch).

3. Tighten screw (1).

ATTENTION!

Material damage

When changing to another needle size, the distance between hook and needle has to be readjusted, (📖 Service Instructions).

Ignoring the above mentioned correction can cause the following errors:


Changing to a smaller needle size:

- Missed stitches
- Thread damage

Changing to a bigger needle size:

- Damage on the hook tip.
- Damage on the needle

5.11 Changing the template set

A template set adapted to the desired sewing shape has to be inserted. It allows for the sewing of straight and curved darts, pleats or, on request, also special customer requirements can be realized,  2.3 *Optional equipment*, p. 8.

ATTENTION!




Caution: Danger of injury!


Turn off the main switch.

The template set may only be changed with the sewing machine being switched off.

Fig. 13: Changing the template set

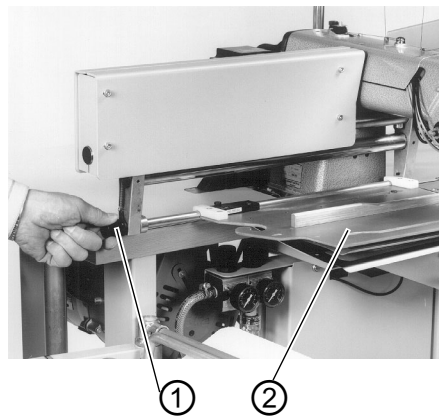

(1) - Handle
(2) - Template set

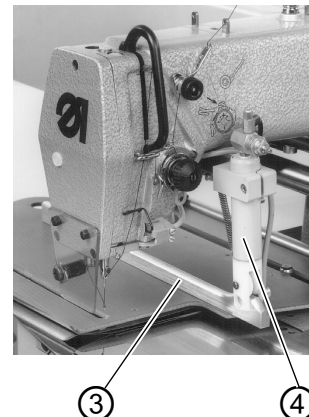


(3) - Control cam
(4) - Hold-down cylinder

Removing the template set

1. Turn the hand wheel until the needle stands in the 2nd position (UDC).
2. Slide the template set (2) into the left end position.
3. Turn the handle (1) about 90° in counter-clockwise direction.
4. Lift the template set (2) at the left side and carefully detach it from the transport carriage.
5. Remove the template set.

Inserting the template set

1. Turn the hand wheel until the needle stands in the 2nd position (UDC).
 2. Move the transport carriage to the left end position.
 3. Bear the template set (2) with the right side carefully onto the transport carriage.
 4. Turn the handle (1) 90° in counter-clockwise direction and lay the template set completely onto the transport carriage.
 5. Turn back the handle (1).
-  The template set is locked and safely fastened to the transport carriage.

6. Position the hold-down cylinder (4) with the guide roller on the control cam (3).
7. Slide the template set to the right as far as it will go.

5.12 Working range, angle and length

The dart depth depends on:

- the individual template set
- the dart length
- the position of the folding table

The folding table can be continuously adjusted from 0-10°.

The dart depths for different inclinations and lengths are indicated in the diagrams.

The curve for the curved darts template set is also indicated.

ATTENTION!




Caution: Danger of injury!

Turn off the main switch.

Set the inclination only with the sewing machine switched off

Fig. 14: Setting the inclination

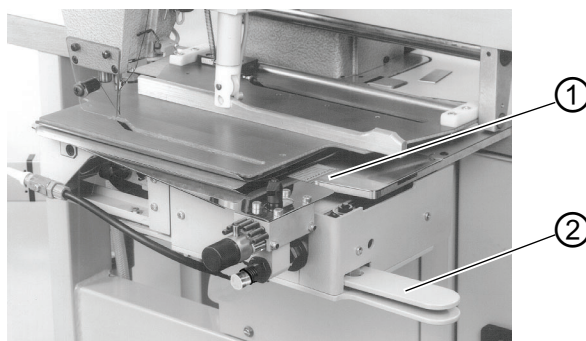

(1) - Scale

(2) - Handle

Setting the inclination

1. Retract the folding table
2. Press the handle (2) together and adjust the folding table according to the scale (1).
3. Release the handle.

↩ The angle is set.

4. Pull out the folding table.

Setting the length

Maximum **dart length** 150 mm.


The seam length is regulated by programming it in the main menu or by the light barrier.

The variant to be used, light barrier or set value, can be selected in the main menu, [5.14 Setting the control unit](#), p. 34.

With transparent sewing material it is recommended to regulate the seam length by programming.

Example Template set, straight darts

Fig. 15: Working range for darts

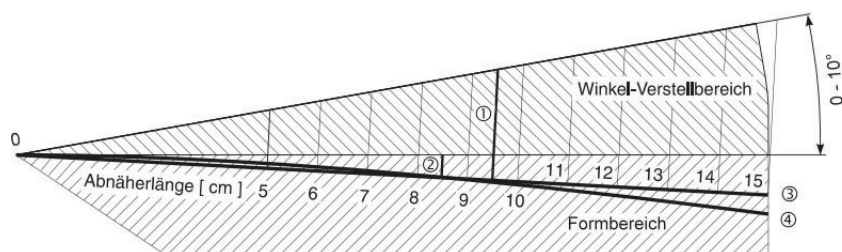

(1) - Dart depth max. 2.1 cm at 10°, length 9.5 cm


(2) - Dart depth max. 0.4 cm at 0°, length 8.5 cm

(3) - Template set, straight darts

(4) - Template set, curved darts

Example Template set pleats

Fig. 16: Working range for pleats

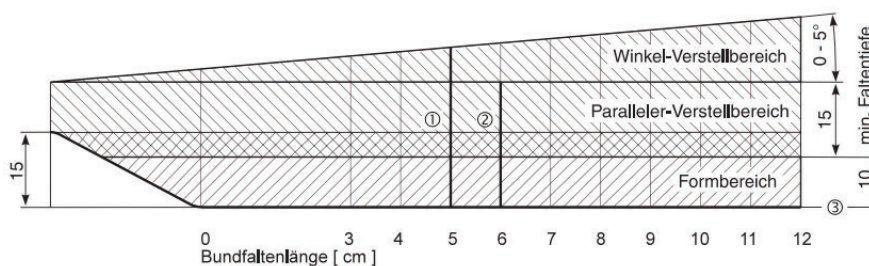

(1) - Pleat depth max. 3.2 cm at 5°, length 5 cm

(2) - Pleat depth max. 2.5 cm at 0°, length 6 cm

(3) - Template set for pleats

5.13 Setting the insertion depth of the folding table

ATTENTION!



Caution: Danger of injury!

Turn off the main switch.


The insertion depth may only be set or altered with the sewing machine being switched off.

The first needle entry in the material should be as close as possible to the fold edge.

In order to achieve an evenly slim dart point with material of varied thickness, the machine is equipped with a fine adjustment.

Up to 7 different insertion depths can be set by using the stops (4).

Fig. 17: Setting the insertion depth

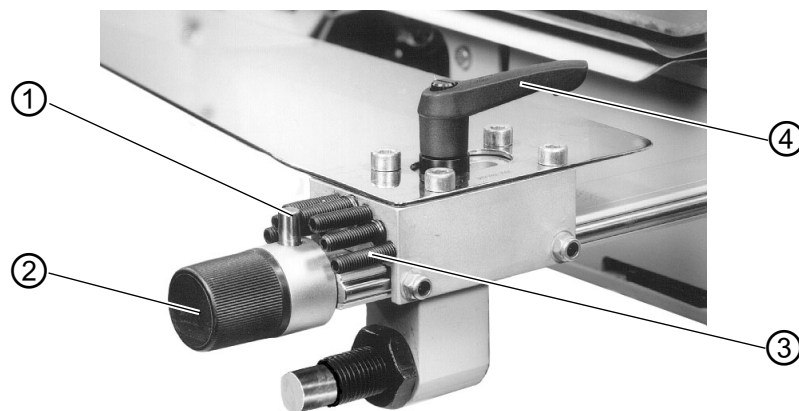

(1) - Stop

(2) - Adjustment knob

(3) - Set screw

(4) - Lever

Setting the insertion depth

1. Release the lever (4).
2. Slide the folding table on its guiding a little to the front.
3. Set one of the set screws (3) (7 pieces) to the desired insertion depth.
4. Turn the adjustment knob (2) to the desired insertion depth (until it stops).
5. Slide the folding table back to the rear.
The adjustment knob (3) has to abut on the stop (1).
6. Tighten the lever (4) again.

Altering the insertion depth

1. Release the lever (4).
2. Slide the folding table on its guiding a little to the front.
3. Turn the adjustment knob (2) to the desired insertion depth (until it stops).
4. Slide the folding table back to the rear.
The adjustment knob (3) has to abut on the stop (1).
5. Tighten the lever (4) again.

5.14 Setting the control unit

At this point only the settings needed for sewing will be mentioned. Additional settings on the technician level are described in the *Service Instructions*.


The control unit is operated via the operating panel OP3000, 4.2 *Software description*, p. 16.

After switching on the machine the firmware and software versions will briefly be displayed. After this start the reference run by pressing the "OK" key, p. 17.




After the reference run the main menu is displayed.



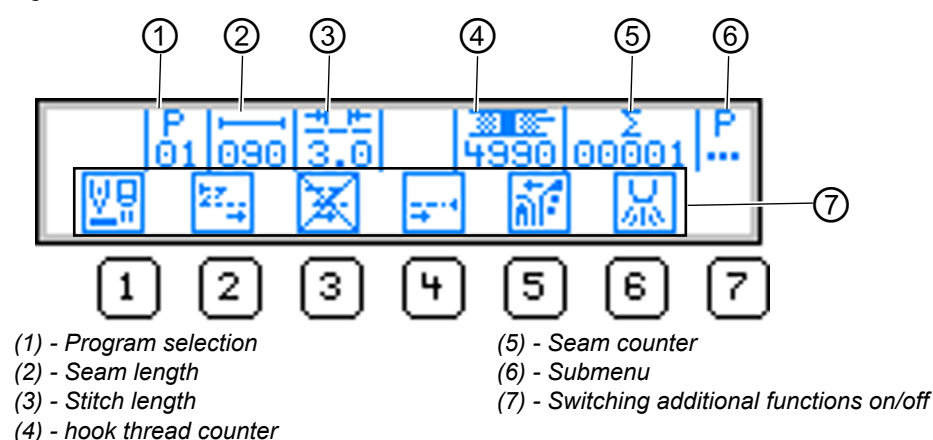



5.14.1 Functions in the main menu

Fig. 18: Main menu



Main menu - Top line	
<ul style="list-style-type: none"> Select the desired parameter with the arrow keys (◀, ▶). ↳ The activated parameter is highlighted. Enter the desired value by using the arrow keys (▼, ▲). ↳ The value is directly applied and memorized for the particular program. 	
	Program selection Program number entry Range of values: 1 - 20
	Seam length Seam length entry in mm Range of values: 19 - 150 Important: The seam length can only be entered if the light barrier (p. 35) is disabled.
	Stitch length Stitch length entry in mm Range of values: 0.5 - 3.0

Main menu - Top line	
	Hook thread counter Display of the number of stitches (in intervals of 10 stitches) that can still be sewn with the bobbin. Resetting the hook thread counter: <ul style="list-style-type: none"> • Long stroke on the "OK" key
	Seam counter Display of the seam segments that have been sewn so far Resetting the seam counter: <ul style="list-style-type: none"> • Long stroke on the "OK" key
	Submenu Access to the submenu with the "OK" key


Main menu - Bottom line	
In the bottom line additional functions are activated or disabled. <ul style="list-style-type: none"> • Press the numerical key below the symbol of the desired function. ↳ You can switch between "activated" and "disabled". When the function is disabled the symbol is crossed out. The setting is directly applied and memorized for the particular program.	
	Light barrier Switch the light barrier on or off with the numerical key "1". Important: If the light barrier is activated, the program will automatically stop the seam upon reaching the bottom edge of the fabric. Disable the function for the manual setting of the seam length (📖 p. 34).
	Seam beginning Switch the tack or the stitch condensing at the seam beginning on or off with the numerical key "2".
	Seam midsection Switch the tack or the stitch condensing at the seam midsection on or off with the numerical key "3".
	Seam end Switch the tack or the stitch condensing at the seam end on or off with the numerical key "4".
	Smoother Switch the smoother on or off with the numerical key "5".
	Blow-out device Switch the blow-out device on or off with the numerical key "6".

5.14.2 Functions in the submenu

Submenu structure		
Symbol	Menu item	Settings
	Speed	
	Soft Start	Activated, Stitches, Speed
	Advance	Length, Speed
	Seam Begin	Lock type, Stitches, Speed, Stitchlength
	Seam Between	Lock type, Stitches, Speed, Stitchlength, Start at
	Seam End	Lock type, Stitches, Speed, Stitchlength
	Thread Chain	Length, Speed
	Stacker	TimeTillStart, TimeTillStop

Navigating in the submenu

Fig. 19: Setting in the submenu

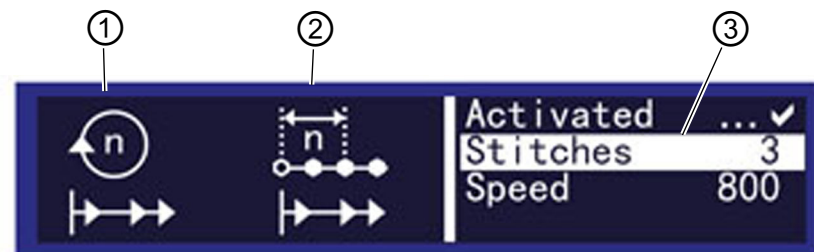

(1) - Symbol for the menu item

(2) - Symbol for the setting

(3) - Selected entry: highlighted

Selecting the menu item

1. Select the desired menu item by using the arrow keys (▼, ▲).

↳ The menu item is highlighted.

2. Activate the menu item with the "OK" key.

↳ The symbol for the menu item (1) appears on the left side of the display.

On the right side the settings of the menu item are listed.

Selecting the setting

3. Select the desired setting by using the arrow keys (▼, ▲).



↳ The setting is highlighted (3).



 

4. Activate the setting with the "OK" key.

 
 
 
↳ In addition to the symbol for the menu item (1), the symbol for the setting (2) appears on the left side of the display.



 


- Changing the value**
5. Change the value for the setting by using the numerical keys or the arrow keys (▼, ▲).
 6. Confirm the desired value with the “OK” key.
 - ↳ The value is applied and memorized for the particular program.
- Return**
7. Use the arrow key ◀ to return to the previous level in the submenu.
 8. Use the escape key to return to the main menu.


 
 

 
 
Settings in the submenu






	Menu item Speed Number of revs for the sewing speed	
Symbol	Explanation	Range of values
	There are no further settings for this menu item. Directly enter the value for the speed.	500 – 4000

 
 
 
	Menu item Soft start Settings for the soft start at seam beginning		
Symbol	Setting	Explanation	Range of values
	Activated	Switch the soft start on or off with the “OK” key. • On: display shows “✓” • Off: blank display	On/Off
	Stitches	Number of stitches for the soft start	1 – 9
	Speed	Number of revs for the sewing speed at soft start	500 – 2000




	Menu item Advance Settings for the advance at seam beginning		
Symbol	Setting	Explanation	Range of values
	Length	Length of the advance in mm	0 – 50
	Speed	Number of revs for the sewing speed at advance	500 – 4800

 Menu item Seam Begin Settings for tacks/stitch condensing at seam beginning			
Symbol	Setting	Explanation	Range of values
	Lock Type	Choose between tack and stitch condensing with the "OK" key: • Tack: display shows "✓" • Stitch condensing: blank display	Tack/ stitch condens- ing
	Stitches	Number of stitches with tack/stitch condensing	1 – 9
	Speed	Number of revs for the sewing speed when sewing the tack/stitch condensing	500 – 3000
	Stitchlength	Stitch length of the stitch condensing in mm	0.5 – 2.0

 Menu item Seam Between Settings for tacks/stitch condensing at seam midsection			
Symbol	Setting	Explanation	Range of values
	Lock Type	Choose between tack and stitch condensing with the "OK" key: • Tack: display shows "✓" • Stitch condensing: blank display	Tack/ stitch condens- ing
	Stitches	Number of stitches with tack/stitch condensing	1 – 9
	Speed	Number of revs for the sewing speed when sewing the tack/stitch condensing	500 – 3000
	Stitchlength	Stitch length of the stitch condensing in mm	0.5 – 2.0
	Start at	Indicates the seam segment in mm, after which the tack/stitch condensing will start.	10 – 130

 Menu item Seam End Settings for the tack/stitch condensing at seam end			
Symbol	Setting	Explanation	Range of values
	Lock Type	Choose between tack and stitch condensing with the "OK" key: • Tack: display shows "✓" • Stitch condensing: blank display	Tack/ stitch condens- ing
	Stitches	Number of stitches with tack/stitch condensing	1 – 9
	Speed	Number of revs for the sewing speed when sewing the tack/stitch condensing	500 – 3000
	Stitchlength	Stitch length of the stitch condensing in mm	0.5 – 2.0






 Menu item Thread Chain Settings for a thread chain at seam end			
Symbol	Setting	Explanation	Range of values
	Length	Length of the thread chain in mm	8 – 25
	Speed	Number of revs for the sewing speed when sewing the thread chain	500 – 3000

 Menu item Stacker Settings for the stacker			
Symbol	Setting	Explanation	Range of values
	TimeTillStart	Time span in milliseconds after the seam end, before the smoother is activated.	10 – 1000
	TimeTillStop	Time span in milliseconds from the activation of the smoother until the shackle of the smoother moves upwards again.	10 – 1000

5.14.3 Error messages

After certain incidents like f. e. a thread rupture the sewing process has to be interrupted. An error number will appear on the display.

The following table lists the error numbers and their explanation as well as the troubleshooting.

Number	Meaning	Troubleshooting
3210	Needle thread rupture	Thread in a new needle thread,  p. 18.
3215	Hook thread counter has reached value 0	Check the bobbin's thread reserve and insert a new bobbin if necessary,  p. 24 reset the hook thread counter,  p. 35
3216	Residual thread monitor reports empty bobbin	Insert a new bobbin,  p. 24.
3302	No pressure available	Check the pressure at the maintenance unit,  p. 53.
3303	Folding table in wrong position	Pull out the folding table.
3304	No template set inserted	Insert a template set. Check the contact pressure, if a template set is already inserted.
3340	Contact pressure too low	Correct the contact pressure for the template set by setting the screw at the top on the hold-down cylinder.

5.15 Sewing

In order to start sewing, certain requirements have to be fulfilled. Below you will find the description of a typical sewing process.

Before sewing start, all dart lengths have to be marked on the folding plate (1) with adhesive tape (flat and as thin as possible).

ATTENTION!



Caution: Danger of injury!


Only mark the dart length with the sewing machine being switched off.

ATTENTION!

Material damage

Do not slide in the folding table without sewing material on it. The friction surfaces of the template set could get damaged.

Fig. 20: Sewing process

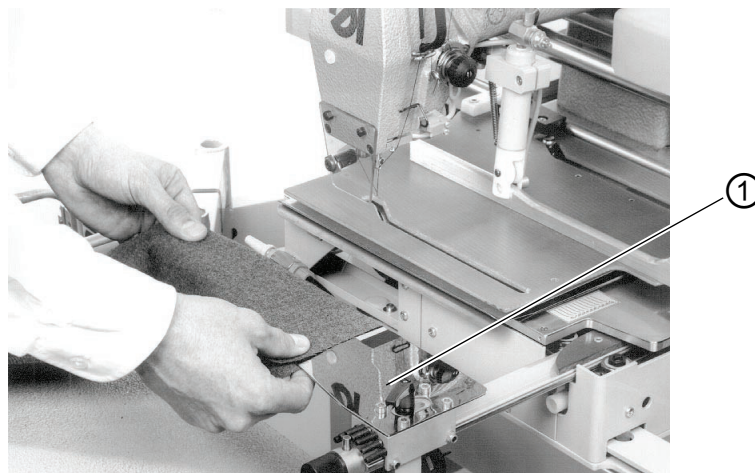

(1) - Folding plate

1. Turn on the machine at the main switch.
2. Start the reference run by pressing the "OK" key.
 - ↳ The machine is ready for operation after carrying out a reference run. It is in its initial position.
3. Select a program in the main menu,
 - 📖 5.14 Setting the control unit, p. 34.
 - ↳ The selected program is activated.
4. Put the workpiece with both hands around the edge of the folding plate.

5. Align the cut edges with the right hand to come on top of each other.
 6. Adjust the notch for the dart length exactly at the rear edge of the folding plate.
 7. Fix the workpiece by holding it with the right hand and slide in the folding plate.
- ✎ The workpiece is kept in place by the template set.
The folding plate slides back.
The sewing process is carried out.

5.16 Maintenance of the sewing unit

ATTENTION!



Caution: Danger of injury!

Turn off the main switch.

The maintenance of the sewing machine must only be carried out when the machine is switched off.

5.16.1 Swinging up the machine head.

ATTENTION!




Caution: Danger of injury!

Turn off the main switch.

Swing the machine head up only when the sewing unit is switched off.

For maintenance work the machine head can be swung up.

Fig. 21: Swinging up the machine head

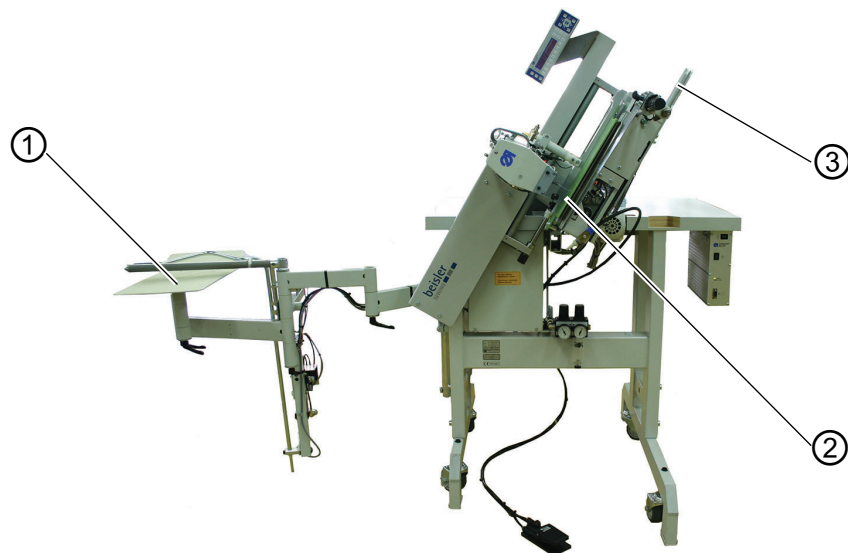

(1) - Positioning table
(2) - Template set

(3) - Handle

1. Swivel the positioning table (1), the bundle clamp and the smoother aside
2. Slide the template set (2) into the left end position.


3. Carefully swing up the machine head with the handle (3) and make it rest against the support.
- ↳ The machine's gravity center keeps it in position.
4. Swing back the machine in the same way.

5.16.2 Cleaning

A clean sewing unit is a trouble-free sewing unit.

Daily Cleaning

Fig. 22: Daily cleaning

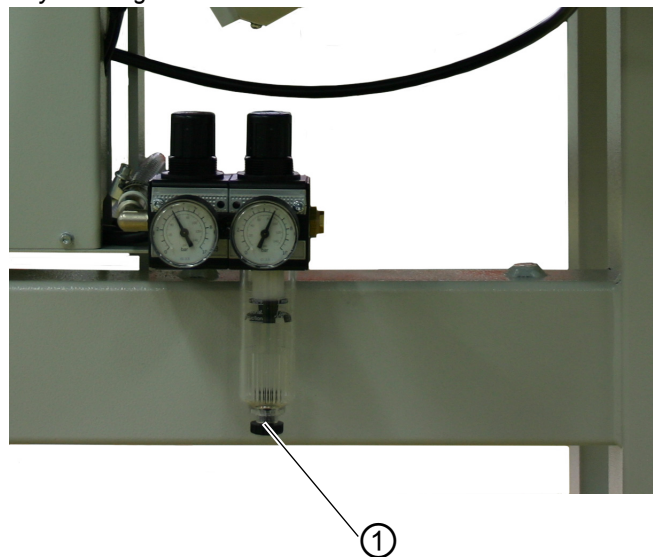


(1) - Drain screw

1. Remove all fluff balls.
2. Clean the lenses of the light barrier with a soft cloth.
3. Check the water level in the pressure regulator.
The water level must not reach the filter element.
4. After screwing in the drain screw (1) blow out the water under pressure.

Depending on
the amount of fluff

Fig. 23: Cleaning as the need arises

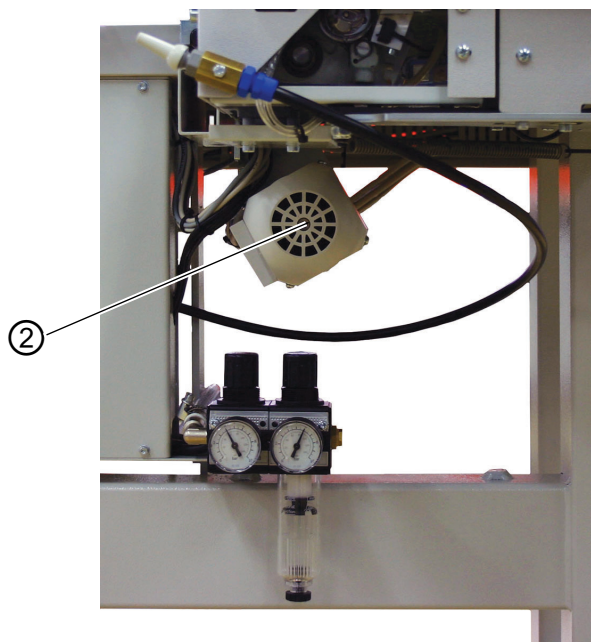

(2) - Motor fan grille

Clean the motor fan grille (2).

5.16.3 Oil lubrication

ATTENTION!



Caution: Danger of injury!

Oil can cause skin rashes.

Avoid a longer skin contact with the oil.

After contact wash yourself thoroughly.

ATTENTION!



Environmental hazards:

The handling and disposal of mineral oils is subject to legal regulations.

Deliver used oil to an authorized collecting station.

Protect your environment.

Pay attention not to spill any oil.

To lubricate the sewing unit use only **DA -10** lubricating oil or an equivalent oil with the following specifications:

Viscosity at 40° C: 10 mm²/s

Ignition point: 150° C

DA-10 lubricating oil is available from the **DÜRKOPP ADLER AG** sales offices under the following parts numbers:


250-ml container:	9047 000011
1-liter container	9047 000012
2-liter container	9047 000013
5-liter container	9047 000014

hook lubrication

1. Swinging up the machine head as described.
2. Fill up the oil reservoir (1) with oil up to the marking **max**.

The necessary oil quantity is factory set by the manufacturer. Increase or decrease the oil quantity only in exceptional circumstances.

Fig. 24: Oil reservoir 1 - hook lubrication

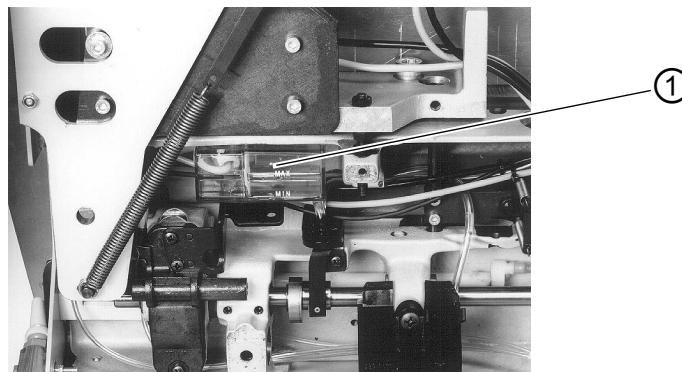


(1) - Oil reservoir 1

Machine head lubrication

1. The oil level in the oil reservoir (2) must not drop below the marking **min**.
2. If necessary, fill in oil through the drill-hole (1) in the inspection glass up to the marking **max**.

Fig. 25: Oil reservoir 2 - machine head

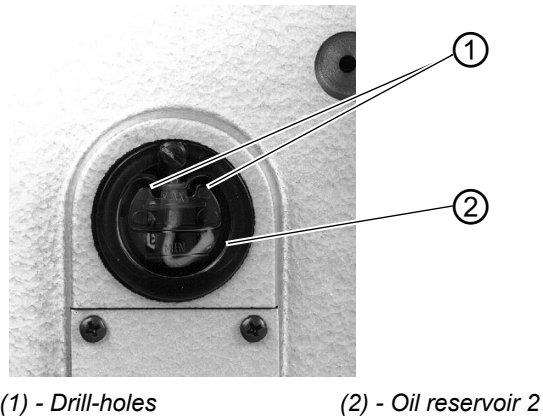

6 Installation

In the following, the steps are listed in chronological order. The structure of the chapter follows this order.

The manufacturer will not be held liable for damage resulting from improper use.

WARNING



Danger of injury due to insufficient technical knowledge

During the installation of the machine, insufficient technical knowledge can lead to serious injuries. The machine should be installed **ONLY** by trained personnel.

DANGER



Risk of injury due to electric power!

Unprotected contact with electric power can cause dangerous injuries to life and limb.

All work on the electrical equipment may **ONLY** be carried out by qualified electricians or other appropriately trained persons.

ALWAYS disconnect the power plug before carrying out work at the electrical equipment.

6.1 Delivery scope

What items are supplied depends on your order. Prior to set-up, please check that all required parts are present.

- Standard equipment
- Optional equipment
- Small parts in the accessories

6.2 Installing the sewing unit

6.2.1 Transportation

CAUTION



Risk of injury due to incorrect transportation!

Do NOT lift the sewing unit at the table tops.
ALWAYS use an elevating platform truck or a forklift

CAUTION



Risk of injury due to unstable footing!

Before putting the sewing unit into operation screw in the castors until the unit attains a secure standing.


Lifting the sewing unit

- Only with an elevating platform truck or a forklift.

For in-house transport the stand is equipped with four castors.

Rolling the sewing unit

Fig. 26: Transport on castors

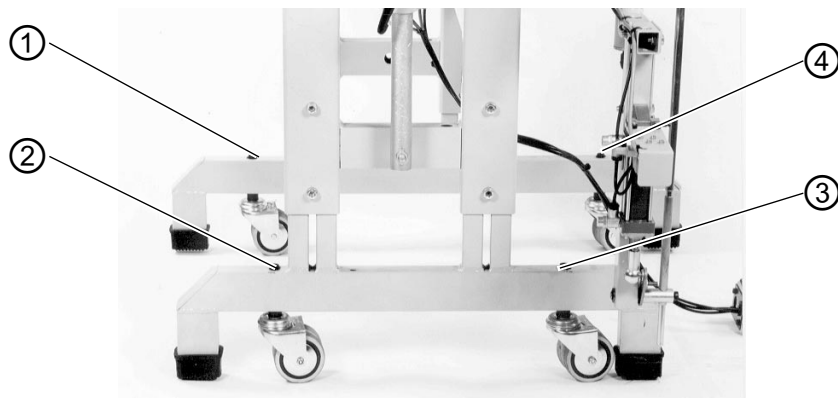

(1) - Adjusting screw
(2) - Adjusting screw

(3) - Adjusting screw
(4) - Adjusting screw

1. In order to transport the unit on its castors, turn the setting screws (1) to (4) counter-clockwise. The feet must have sufficient ground clearance for transportation.
2. Transporting the sewing unit
3. To lower the sewing unit turn the setting screws (1) to (4) in clockwise direction. The feet must stand firmly on the ground.

6.2.2 Removing the transport securing devices

Before installing the sewing unit, you have to remove all the securing devices.

All movable parts have to be unlocked:

- Positioning table
- Sewing drive
- Smoother and bundle clamp
- Positioning table

If the sewing unit has to be transported to another place, you have to attach the securing devices again.

6.2.3 Setting the working height


The working height is adjustable between 850 and 1250 mm (measured to the upper edge of the table plate).

CAUTION



Be careful when loosening the attachment screws. The sewing unit may keel over when the tubular feet of the frame are pulled out.

Fig. 27: Setting the working height

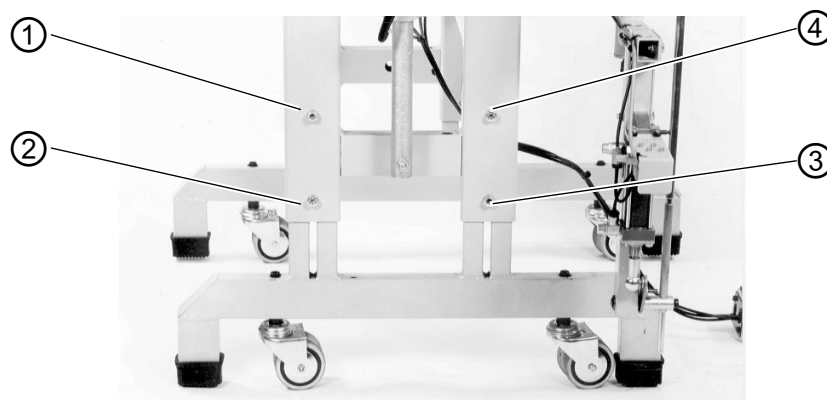

(1) - Screw
(2) - Screw

(3) - Screw
(4) - Screw

1. Loosen screws (1) to (4).
2. Set the unit to the desired height and level it out.
3. Re-tighten screws (1) to (4) again.

6.3 Attaching the machine parts removed for shipping


Some parts of the machine had to be removed or shifted in their position for shipment. These parts have to be attached correctly before start of work.

6.3.1 Thread reel holder

The thread reel holder is loosely added for shipment. In order to connect the machine to the power supply from the top, the connection cable can be run through the tube (2) of the thread reel holder.

Guide the compressed air supply pipe upwards through the second bore hole in the table top and then attach it to the thread reel holder with cable ties.


Fig. 28: Attaching the thread reel holder

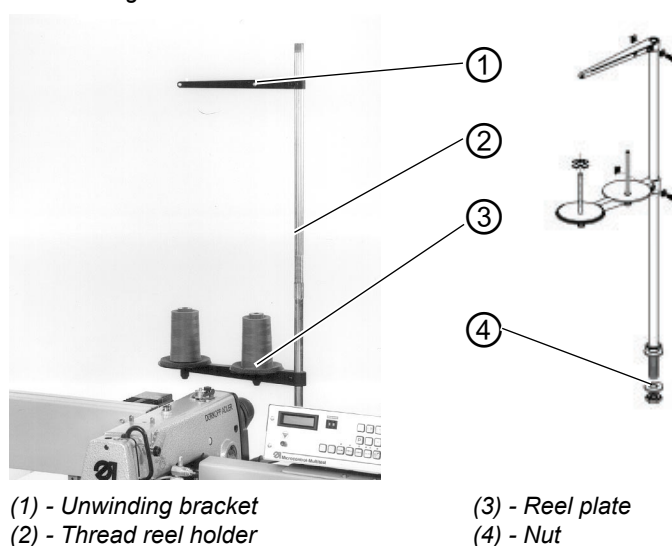

1. Insert the thread reel holder (2) into the bore hole of the table top.
2. Fix it with nut (4) underneath the table top.
3. Align the reel plate (3) and the unwinding brackets (1) parallel to the rear table edge. Reel plate (3) and the unwinding brackets (1) have to point into the same direction.

6.3.2 Holding device for the template set

Fig. 29: Holding device

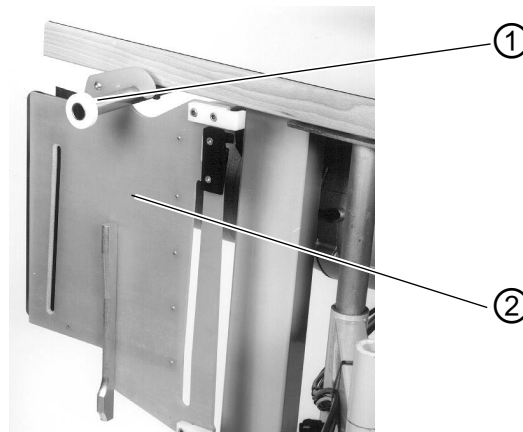


(1) - Holding device
(2) - Template set

During the transport the holding device (1) for the template set (2) is underneath the table top.

1. Remove the fastening screws.
2. Rotate the holding (1) device by 180°.
3. Attach the fastening screws again.

6.3.3 Attaching the operating panel OP 3000

Fig. 30: Fixation operating panel OP 3000

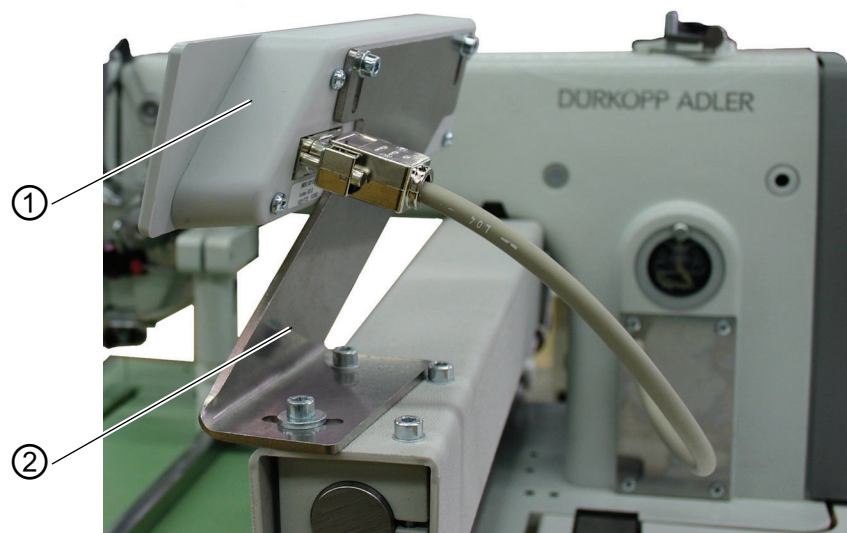

(1) - Control panel (2) - Angle

1. Attach angle (2).
2. Attach the operating panel (1) onto angle (2).

6.4 Electrical connection

DANGER



Risk of injury due to electric power!


Unprotected contact with electric power can cause dangerous injuries to life and limb.

All work on the electrical equipment may **ONLY** be carried out by qualified electricians or other appropriately trained persons.

ALWAYS disconnect the power plug before carrying out work at the electrical equipment.

Connection the control panel

Fig. 31: Connection control panel

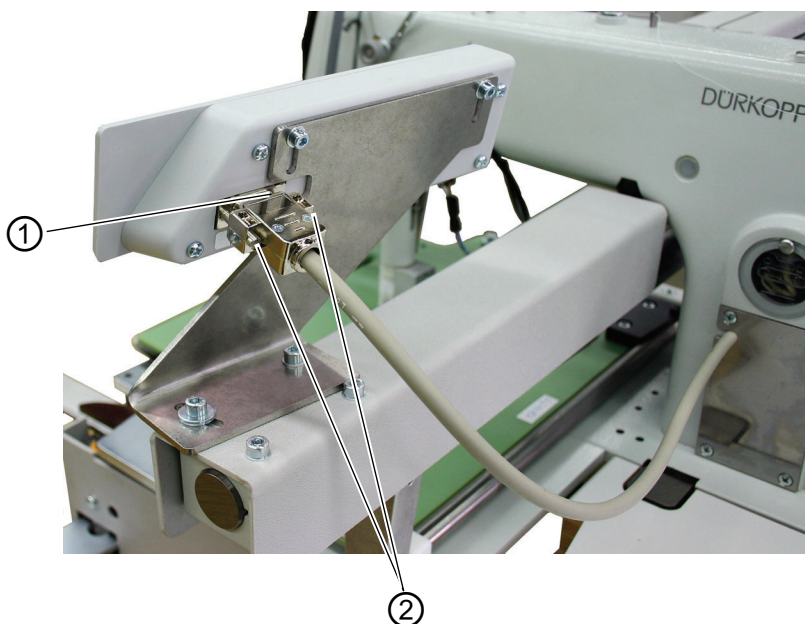

(1) - Plug

(2) - Screws

1. Carefully insert plug (1) into the rear panel of the operating panel.
2. Tighten the screws (2) of plug (1).

6.5 Pneumatic connection

For the operation of the pneumatic components the sewing unit has to be supplied with anhydrous compressed air.

ATTENTION

Material damage!

For a trouble-free function of the pneumatic control procedures the compressed air supply must operate as follows:

Even at the moment of the highest air consumption the minimum operating pressure (2) must not drop below **6 bar**.

ATTENTION

Material damage!

No oil-bearing compressed air must be fed from the compressed air line. Behind the filter cleaned compressed air is withdrawn as blowing air for cleaning machine parts and for blowing out workpieces. Oil particles contained in the blowing air lead to malfunctions and stains on the workpieces.

In case of a too high loss of pressure:


- Increase the compressor output.
- Increase the diameter of the compressed air hose.

The connection to the compressed air supply is effectuated with the accessory delivered as optional equipment or with in-house fitting material.

Operating pressure (2) = 6 bar

Blowing pressure (1) = Has to be adjusted according to the sewing material standard setting 3 bar

Fig. 32: Pneumatic connection

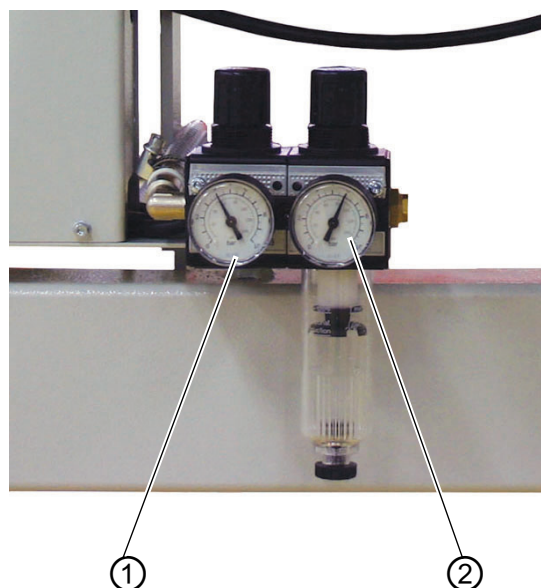

(1) - Blowing pressure

(2) - Operating pressure

To adjust the pressure lift the corresponding rotary handle and twist it.

- Turning in clockwise direction = the pressure is increased
- Turning counter-clockwise = the pressure is reduced

6.5.1 Oil lubrication

ATTENTION



Caution: Danger of injury!

Oil can cause skin rashes.

Avoid a longer skin contact with the oil.

After contact wash yourself thoroughly.

ATTENTION



Environmental hazards

The handling and disposal of mineral oils is subject to legal regulations.

Deliver used oil to an authorized collecting station.

Protect your environment.

Pay attention not to spill any oil.

To lubricate the sewing unit use only **DA -10** lubricating oil or an equivalent oil with the following specifications:

Viscosity at 40° C: 10 mm²/s

Ignition point: 150° C

DA -10 lubricating oil is available from the **DÜRKOPP ADLER AG** sales offices under the following parts numbers:


250 ml container:	9047 000011
1-liter container	9047 000012
2-liter container	9047 000013
5-liter container	9047 000014

Hook lubrication

1. Swing up the machine head as described.
2. Fill up the oil reservoir (1) with oil up to the marking **max**.

The necessary oil quantity has been set in the factory by the manufacturer. Increase or decrease the oil quantity only in special cases.

Fig. 33: Oil reservoir 1 - hook lubrication

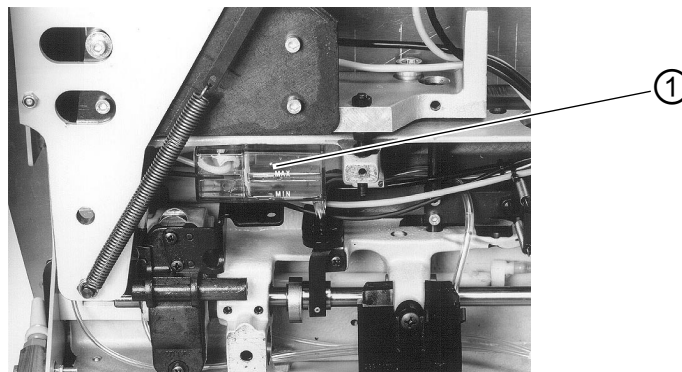


(1) - Oil reservoir 1

Machine head lubrication

1. The oil level in the oil reservoir (1) must not drop below the marking **min**.
2. If necessary, fill oil through the drill-holes in the inspection glass up to the marking **max**.

Fig. 34: Oil reservoir 2 - machine head

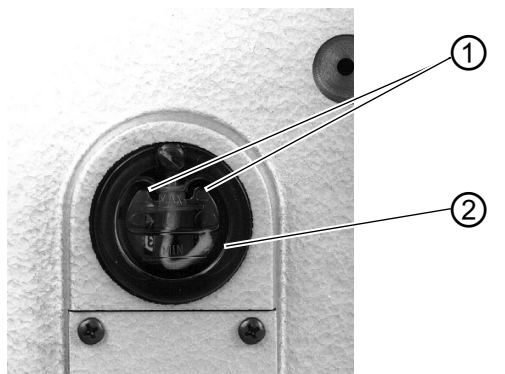

(1) - Oil reservoir 2

(2) - Drill-holes

6.6 Putting into operation

After completion of the installation work a sewing test should be made.

- Plug in the mains plug.


DANGER



Risk of injury due to pointed items and glare

Turn off the main switch before threading in the needle and hook thread.

Do not look into the light source.

- Threading in the needle thread
- Thread in the hook thread.
- Turn the main switch on.
The control unit is initialized.
- Start the sewing cycle,  chapter 5.15

6.7 Installation of the software

6.7.1 General information

Loading a specific sewing software in the DAC classic control unit is possible with the help of the “Programmed Dongle”. The “Programmed Dongle” has a label indicating the machine class and the software version.

Such a loading (booting) may be used in order to provide a single DAC-classic control unit with a sewing software (first installation) or to install a newer machine software (update).

With the delivery of the machine only the test software (allowing the loading of sewing software) is installed in the control unit. The test software offers no further functions. If the test software gets damaged during the loading process, it is no longer possible to load a software using a dongle. In such a case use a PC with a loader cable.

ATTENTION

Material damage!

The sewing unit is delivered with a machine software installed on it.

ATTENTION

Turn off the main switch before connecting the dongle.

The instructions for the DAC classic control unit is enclosed with the machine.


6.7.2 Loading the program

ATTENTION

Material damage!

During the loading process do not remove the dongle and do not switch off the machine (otherwise you will destroy the software).

Fig. 35: Connecting the dongle

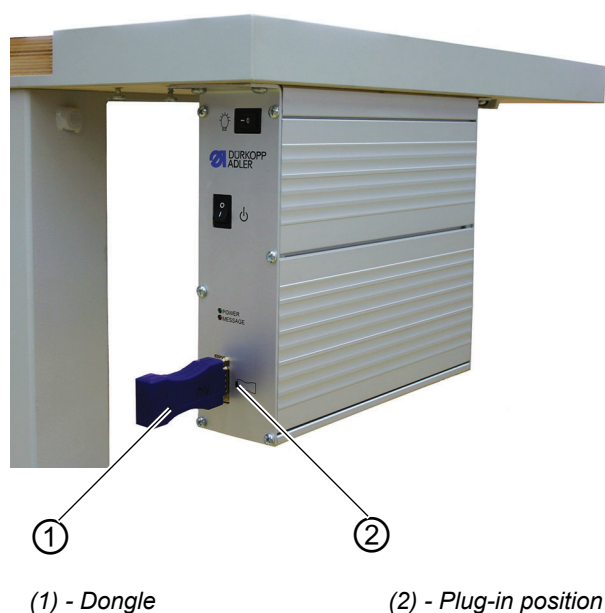

1. Turn off the main switch.
2. Insert the dongle (1) into the plug-in position (2) of the control unit.
3. Turn the main switch on. The Software will be loaded. The loading process takes less than 60 seconds.
4. Turn off the main switch.
5. Remove the dongle (1).
6. Turn the machine on again.

6.7.3 Dongle-Update via Internet

ATTENTION

Material damage!

When transferring the machine software onto the dongle, it will first be deleted (formatted).

The programs (sequences, parameters) saved on the dongle will then be deleted. If still needed, please make a backup of the files into a computer (desktop, notebook).

The required software "Dongle Copy" is available in the "Download Area".

Dongles can be updated by means of Internet. In order to do so, visit the Dürkopp Adler AG homepage "www.duerkopp-adler.com". In the sections "Download Area" and "Software" you will find the auxiliary download software and the appropriate machine software. The instructions also available on the website, describe the complete update procedure of the dongle.

6.8 Customer service

If you have any questions regarding the machine, damage occurring, or wear, please contact

Dürkopp Adler AG
Potsdamer Str.190
33719 Bielefeld
Phone: +49 (0) 180 5 383 756
Fax.: +49 (0) 521 925 2594
E-Mail: service@duerkopp-adler.com
Internet: www.duerkopp-adler.com



DÜRKOPP ADLER AG
Potsdamer Str.190
33719 Bielefeld
Germany
Phone +49 (0) 521 925 00
E-Mail: service@duerkopp-adler.com
www.duerkopp-adler.com